

**SMART ROOF SYSTEM** 

# SMARTBLOX 4" MID-SECTION ADD-ON REPLACEMENT INSTRUCTIONS


#### Step 1 - Remove the Outer section

- (A.)Insert your thumbs into the rings on both sides of the outer section. Pull outward to release the notches,
- (B.) Then lift upward. The upper section will disengage from the assembly.



### Step 2 – Remove the Standard 2" Mid section

- (C.) Again, insert your thumbs into the designated rings on each side of the mid section. Pull outward to release the notches,
- (D.) Then lift the Section straight up until it is fully separated from the base plate.

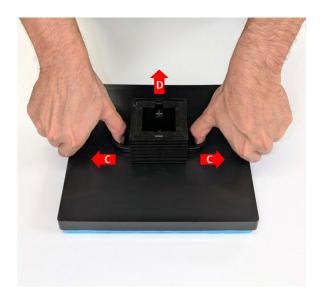





**SMART ROOF SYSTEM** 


## SMARTBLOX 4" MID-SECTION ADD-ON REPLACEMENT INSTRUCTIONS

### Step 3 - Install the 4" Mid Section

(E.) Position the new 4" mid section on top of the base plate (F.) Place your fingers in the side rings and pull outward while pushing the section down.

Note: Ensure the notches on the mid section and base plate engage securely.

(G.) Adjust the section height as required.

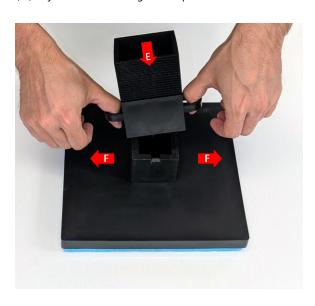




### Step 4 - Install the Outer Section

- (H.) Using the same method as before, install the outer section on top of the newly placed 4" mid section. Pull outward on both sides to clear the notches
- (I.) then push down until it locks into place.
- (J.) Adjust the section height as required.



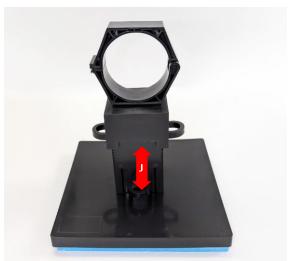

### There is no equal to **PLATINUM!**